
客戶名和 (CUSTOME			
客戶料弱 (PART NO)	虎:		
品名規相 (DESCRIPT		F B251012 H	I
送樣日其 (SENDING I	期: 20	008-12-15	
	1		
客戶簽章: SIGNATURE	永林興電	子(深圳)有降	退公司制作
	永林與電子 审核: APPROVED BY:	子(深圳)有 确认: CHECKED BY:	根公可制作 作成: PREPARED BY:

SPECIFICATION FOR APPROVAL



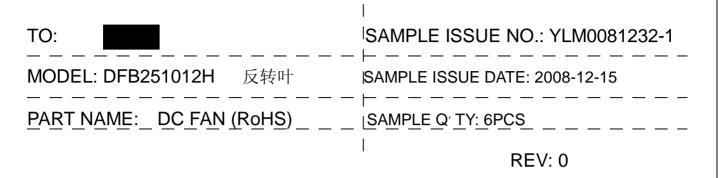

1. SCOPE:

THIS SPECIFICATION DEFINES THE ELECTRICAL AND MECHANICAL

CHARACTERISTICS OF THE DC BRUSHLESS FAN. THE FAN

MOTOR IS WITH TWO PHASES AND FOUR POLES.

2. CHARACTERS:

	 _ 12 <u>VDC</u>
OPERATION VOLTAGE	10.8~13.2VDC
	9VDC(ON/OFF)
INPUT CURRENT	0.13±0.02A
SPEED (10 MINUTE/ ROOM TEMPERATURE 25℃) AIR FLOW	□ 13000 RPM <u>+</u> 20% □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □
AIR PRESSURE	1 - 3.11CFM
AIR FRESSORE (AT ZERO AIRFLOW) ACOUSTICAL NOISE (AVG.)	 ⊢ <u>8.52mmH₂O</u> 33.15dB-A

(Continued) Page: 1

YOUNG LIN TECH CO., LTD,	
<u>MODEL: DFB251012H</u>	
INSULATION STRENGTH	10 MEG OHM MIN.AT 500 VDC
DIELECTRIC STRENGTH	I 5 mA MAX. AT 500 VAC 60 Hz I I ONE MINUTE, (BETWEEN FRAME AND I I (+) TERMINAL) I
	50,000 HOURS CONTINUOUS OPERATION
	AT 25°C_WITH 15~65 %RH

FROM FRAME PLATE SIDE

LOCKING ROTOR.

UL 1061 – AWG #28


BLACK BLACK :(-) RED RED : (+)

THE CURRENT WILL SHUT DOWN WHEN

NOTES: 1. ALL READINGS ARE MEASURED AFTER STABLY WARMING UP THROUGH 10 MINUTES.

2. THE VALUES WRITTEN IN PARENS, ARE LIMITED SPEC.

3. ACOUSTICAL NOISE MEASURING CONDITION:

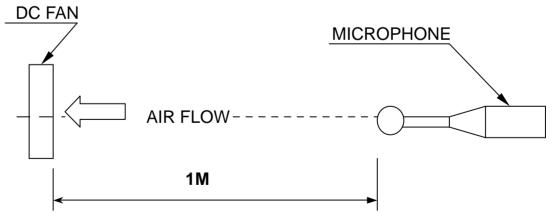

NOISE IS MEASURED AT RATED VOLTAGE IN FREE AIR IN ANECHOIC CHAMBER WITH B & K SOUND LEVEL METER WITH MICROPHONE AT A DISTANCE OF ONE METER FROM THE FAN INTAKE



OVER CURRENT SHUT DOWN

LEAD WIRE

3. MECHANICAL:

3-1. DIMENSION	√S— — — — — — — — — — — — SE	E DIMENSIO	ONS DRAWING
3-2. FRAME		– PLAS	STIC UL: 94V-0
3-3. IMPELLER		— — PLAS	STIC UL: 94V-0
3-4. BEARING S	SYSTEM — — — — — — — — — — — — — — — — — — —	- — – TWO I	BALL BEARING
3-5. WEIGHT -			7.0 GRAMS

4. ENVIRONMENTAL:

4-1. OPERATING TEMPERATURE	-10 TO + 70 DEGREE C
4.2. STORAGE TEMPERATURE	40 TO + 75 DEGREE C
4-3. OPERATING HUMIDITY	— — — — -5 TO 90 % RH
4-4. STORAGE HUMIDITY	— — — — 5 TO 95% RH

5. PROTECTION:

- 5-1. DROP TEST IN MINIMUM PACKAGING CONDITION FAN WITHSTANDS EACH ONE DROP OF THREE FACES FROM 30 CM DISTANCE HEIGHT ONTO 10 MM THICKNESS OF WOODEN BOARD.
- 5-2. LOCKED ROTOR PROTECTION IMPEDANCE OF MOTOR WINDING PROTECTS MOTOR FROM FIRE IN 15 MINUTE OF LOCKED ROTOR CONDITION AT THE RATED VOLTAGE.
- 6. RE OZONE DEPLETING SUBSTANCES;

6-1.RESTRICTION SUBSTANCES OF SAMPLE ARE AS FOLLOWS:			
Pb(PPM)<1000	Cd(PPM)<100	Hg(PPM)<1000	
Cr6+ (PPM)<1000	PBBs (PPM)<1000	PBDEs (PPM)<1000	

	Research & Development Department		
YLTC	Approved BY:	Checked BY:	Prepared BY:
	周向阳	吴明峰	周园

IMPORTANT NOTES & GENERAL INSTRUCTIONS


- 1. Any item which is needed to add into specification shall be determined on customer's prior written request. If no information given , fan will be delivered based on our standard judgment.
- 2. Customer shall confirm the matching and reliability of fan on actual set or unit application.

This include confirmation on set or unit life, electrical noise, mechanical noise, Vibration static electricity ,electric power noise ,drift ,electric resonance between motor and control circuit ,mechanical resonance between motor and chassis, irregular movement of set due to motor noise ,irregular movement of set in strong electromagnetic field ,damaged by lightning surge earthing method etc


- 3. In order to improve the performance within the scope of specification, parts or material changes are subject to prior notice to customer.
- 4. Any revisions on the specification shall be done based on mutual discussion and agreement.
- 5. When any trouble occurs, both parties shall discuss on this specification to solve the matters. In this case, our guarantee is only limited to fans

風扇使用注意事項


HOW TO HANDLE FAN PROPERLY?

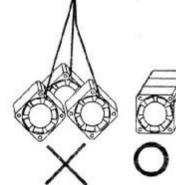


- 1. 取用風扇,輕取外框兩側,不可 拉扯導線。
- Hold the fan by frame side. Do not hold lead wires to support the fan.

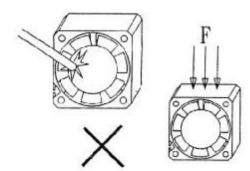


- 取用風扇,不可碰觸或擠壓扇葉與 外框.
- 2. No touching or pressing on the impeller hub.
 - Avoid crushing the frame side.

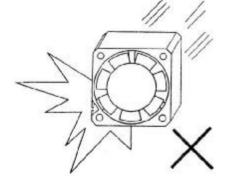

- 風扇巖禁掉落地面,或敲擊外框任 何面.
- 3. Do not drop on the ground.
 - Do not pound on the frame side.



- 4. 風扇電源需依照規格電壓安裝使用.
- 4. Connect leads priperly and applty voltage according to specification.

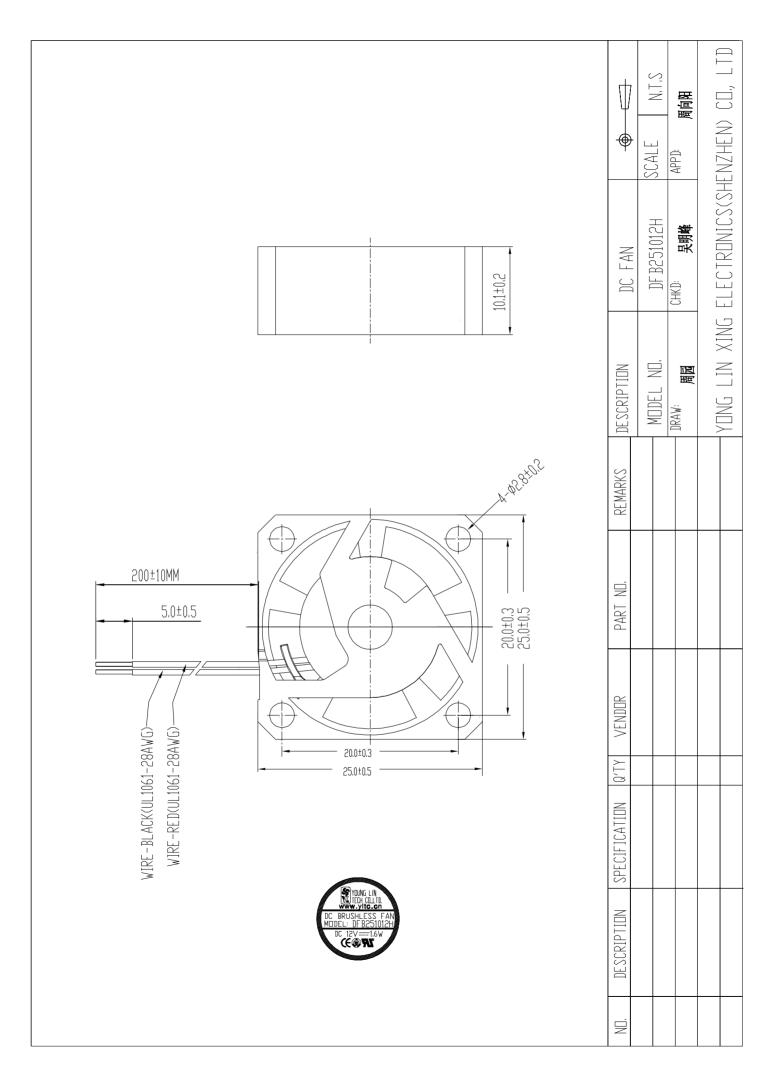

PDF 文件使用 "pdfFactory Pro" 试用版本创建 <u>www.fineprint.com.cn</u>