南百日	ĐE .		
客戶名 (CUSTOM			
客戶料 (PART NO			
品名規	±₽+	0001 = 1 01	
DESCRIP		S801512N	(Hysint)
送樣日 (SENDING		07-10-10	
客戶簽章: SIGNATURE	永林興電	子(深圳)有	限公司制作
SIGNATORE	· 计 计 ·	确 认:	作成: PREPARED BY:
SIGNATURE	审核: APPROVED BY:	CHECKED BY:	

SPECIFICATION FOR APPROVAL

 TO:
 SAMPLE ISSUE NO.: YL0710026-2

 MODEL: DFS801512M(Hysint)
 SAMPLE ISSUE DATE: 2007-10-10

 PART NAME:
 DC FAN(RoHS)
 SAMPLE Q'TY: PCS

 REV: 0

1. SCOPE:

THIS SPECIFICATION DEFINES THE ELECTRICAL AND MECHANICAL

CHARACTERISTICS OF THE DC BRUSHLESS FAN. THE FAN

MOTOR IS WITH TWO PHASES AND FOUR POLES.


2CHARACTERS:	
<u>ITEM</u>	<u>DESCRIPTION</u>
RATED_VOLTAGE	_12 VDC
OPERATION_VOLTAGE	_10.8~13.2VDC
<u>STARTING VOLTAGE</u>	_9 <u>VDC(ON/OFF)</u>
INPUT CURRENT	$0.14 \pm 10\%$ A
SPEED 	2500 RPM <u>+</u> 10%
(AT_ZERO_STATIC_PRESSURE)	_24.89CFM
AIR PRESSURE(AT ZERO AIRFLOW)ACOUSTICAL NOISE (AVG.)	
<u>SAFETY TYPE</u>	

(Continued)

	10 MEG OHM MIN.AT 500 VDC (BETWEEN FRAME AND (+) TERMINAL)
DIELECTRIC STRENGTH	5 mA MAX. AT 500 VAC 60 Hz ONE MINUTE, (BETWEEN FRAME AND (+) TERMINAL)
	AT 25℃ WITH 15~65 %RH. WIDDERSHINS VIEW
LEAD WIRE	UL 1007 – AWG #26 BLACK BLACK :(-) RED RED: (+)

NOTES: 1. ALL READINGS ARE MEASURED AFTER STABLY WARMING UP THROUGH 10 MINUTES.

- 2. THE VALUES WRITTEN IN PARENS, ARE LIMITED SPEC.
- 3. ACOUSTICAL NOISE MEASURING CONDITION:

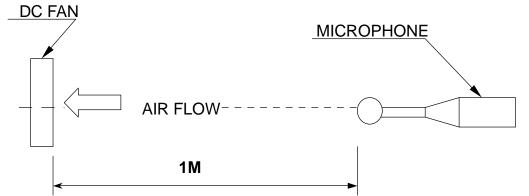

NOISE IS MEASURED AT RATED VOLTAGE IN FREE AIR IN ANECHOIC CHAMBER WITH B & K SOUND LEVEL METER WITH MICROPHONE AT A DISTANCE OF ONE METER FROM THE FAN INTAKE



<u>MODEL: DFS80151</u> 2	<u>M(Hysint)</u>		
3. MECHANICAL:			
3-2. FRAME— — — 3-3. IMPELLER — 3-4. BEARING SYS			PLASTIC UL: 94V-0 PLASTIC UL: 94V-0 HYSINT BEARING
4. ENVIRONMENTAL			
4.2. STORAGE TEM 4-3. OPERATING H	/IPERATURE— — — UMIDITY — — — —		0 TO + 70 DEGREE C 40 TO + 75 DEGREE — — -5 TO 90 % RI — — 5 TO 95% RH
5. PROTECTION:			
DROP OF THR	ACKAGING CONDITIO EE FACES FROM 30 F WOODEN BOARD.		
	OR PROTECTION OF MOTOR WINDING OCKED ROTOR CON		
6. RE OZONE DEPLE 6-1.RESTRICTION Pb(PPM)<1000 Cr6+ (PPM)<10	SUBSTANCES OF SA Cd(PPM)<	AMPLE ARE AS FO 100	LLOWS: M)<1000 s (PPM)<1000
	Resea	rch & Development Dep	artment
YLTC	Approved BY:	Checked BY:	Prepared BY:
	周向阳	吴明峰	周园
	Page: 3	•	

IMPORTANT NOTES & GENERAL INSTRUCTIONS

- 1. Any item which is needed to add into specification shall be determined on customer's prior written request. If no information given , fan will be delivered based on our standard judgment.
- 2. Customer shall confirm the matching and reliability of fan on actual set or unit application.


This include confirmation on set or unit life, electrical noise, mechanical noise, Vibration static electricity ,electric power noise ,drift ,electric resonance between motor and control circuit ,mechanical resonance between motor and chassis, irregular movement of set due to motor noise ,irregular movement of set in strong electromagnetic field ,damaged by lightning surge earthing method etc

- 3. In order to improve the performance within the scope of specification, parts or material changes are subject to prior notice to customer.
- 4. Any revisions on the specification shall be done based on mutual discussion and agreement.
- 5. When any trouble occurs, both parties shall discuss on this specification to solve the matters. In this case, our guarantee is only limited to fans


Page: 4

風扇使用注意事項


HOW TO HANDLE FAN PROPERLY?

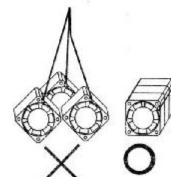


- 1. 取用風扇, 輕取外框兩側, 不可 拉扯導線.
- Hold the fan by frame side. Do not hold lead wires to support the fan.

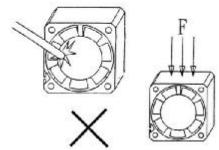


- 取用風扇,不可碰觸或擠壓扇 葉與 外框.
- 2. No touching or pressing on the impeller hub.
 - Avoid crushing the frame side.

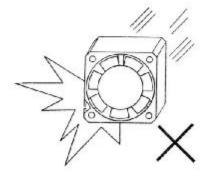

- 風扇巖禁掉落地面,或敲擊外框任 何面.
- 3. Do not drop on the ground.
 - Do not pound on the frame side.

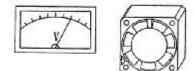

- 4. 風扇電源需依照規格電壓安裝使用.
- 4. Connect leads priperly and applty voltage according to specification.

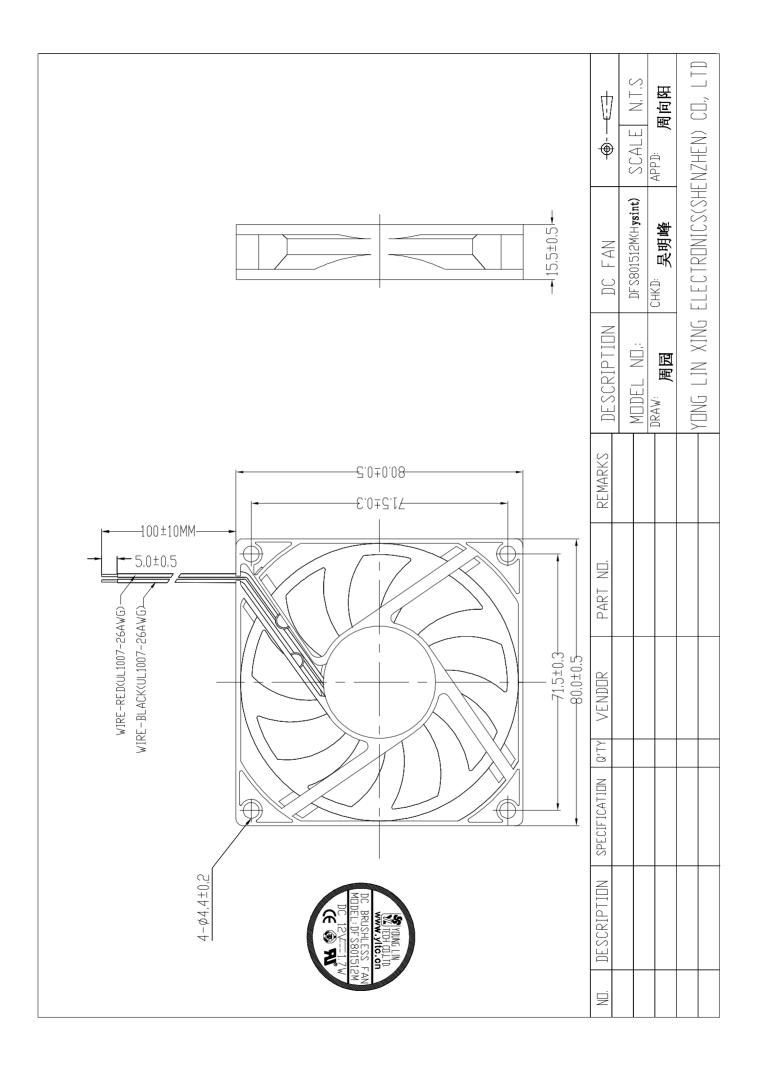

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn